OVEN PARTS

For Models:RBS245PDB11, RBS245PDQ11, RBS245PDT11
(Black) (Designer White) (Biscuit)

24" BUILT−IN ELECTRIC SINGLE OVEN SELF−CLEAN

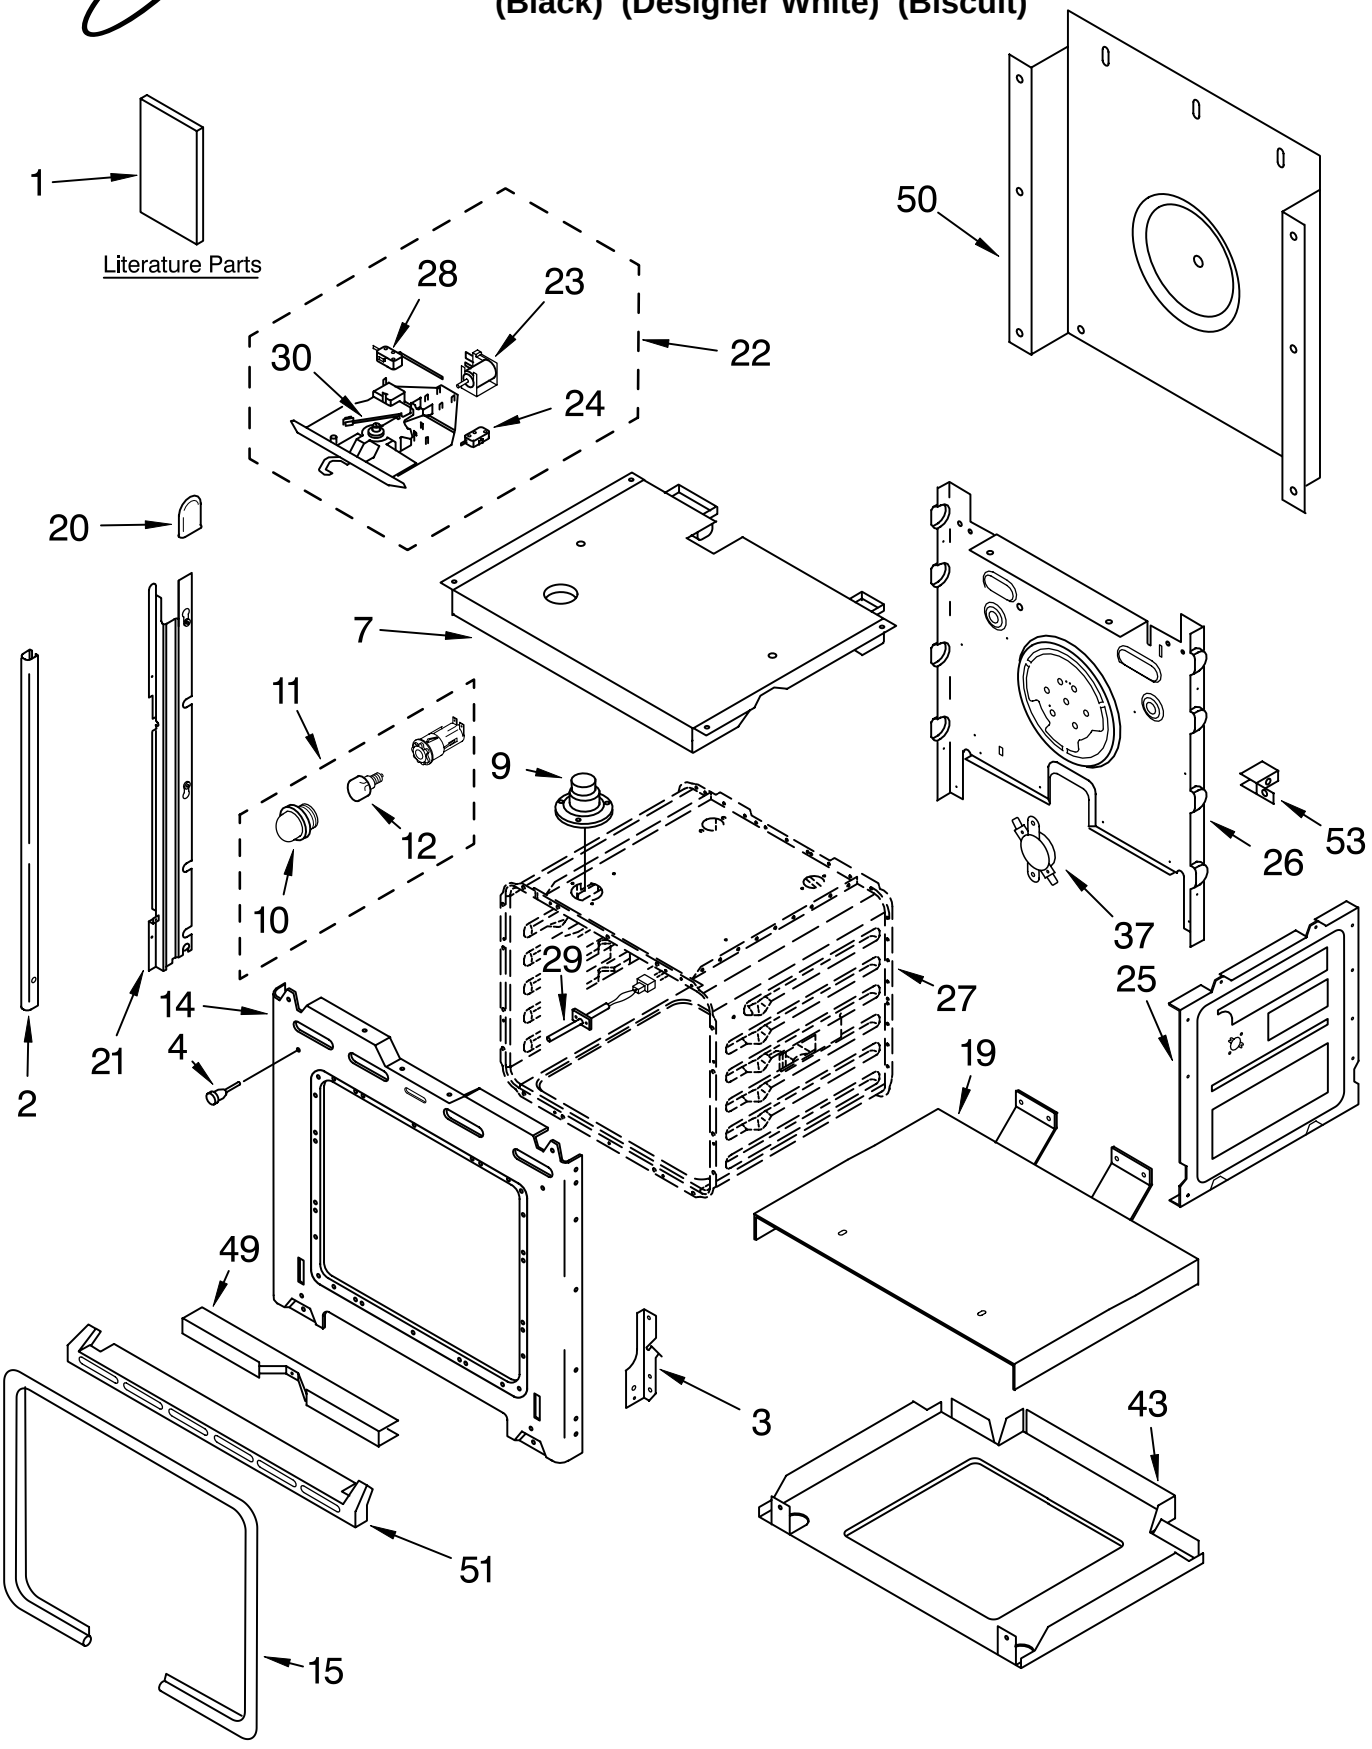

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN PARTS

For Models:RBS245PDB11, RBS245PDQ11, RBS245PDT11

(Black) (Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT4450409	Installation Instructions
	LIT4450568	Use & Care Guide (Oven)
	LIT4451884	Tech Sheet
	LIT3192225	Installation/ Undercounter
	LIT4450841	Installation/ MWO Trim Kit
	LIT3191638	Safer Cooking Tips
2		Trim, Side
	4450844	RH Black
	4450845	RH White
	4452120	RH Biscuit
	4450847	LH Black
	4450848	LH White
	4452121	LH Biscuit
		Screw
	3400832	Black Model
	4449041	White
3		Hinge Receiver
	4455520	Left Hand
	4455521	Right Hand
4	4448520	Bumper, Door
7	4455284	Top Chassis
	4449809	Screw
9	4452158	Tube, Vent
	3196176	Screw
10	4452165	Lens, Light
11	4452368	Oven Light Assy
12	4452166	Bulb,Light
14	4455610	Frame, Front
	4449040	Screw
	4450118	Nut
15	4455380	Gasket, Door
19	4451476	Support, Insulation
	4449154	Screw
20	4451605	Cap, Spacer
21		Rail, Side
	4450579	Right Side
	4450580	Left Side
	4448444	Grommet
	4449154	Screw
22	4451896	Latch, Assy
	4449809	Screw
23	4452224	Solenoid
24	4452312	Micro Switch N.A.
25	4455641	Side, Chassis (R.H. & L.H.)
	4449809	Screw
26	4452232	Back, Chassis
	4449809	Screw
27		Liner, Oven (Not serviceable)
28	4451426	Switch, Micro
29	4455636	Sensor
	4449154	Screw
30	4451537	Spring, Latch
37	4451442	Thermostat (TOD) (Temp.) SPST
	4449809	Screw
43	4450525	Base, Chassis
	4449809	Screw
49	4448933	Retainer,Gasket
	4449154	Screw
50	4451747	Cover, Back
	4449809	Screw
51		Trim, Bottom
	4448473	Black Model
	4448474	White Model
	8300528	Biscuit Model
	4449745	Screw
53	4449845	Support, Bracket
	4449809	Screw

FOLLOWING PARTS NOT ILLUSTRATED

INSULATION

	4449314	Insulation, Wrap
	4450363	Insulation, Back

CONTROL PANEL PARTS

For Models:RBS245PDB11, RBS245PDQ11, RBS245PDT11
(Black) (Designer White) (Biscuit)

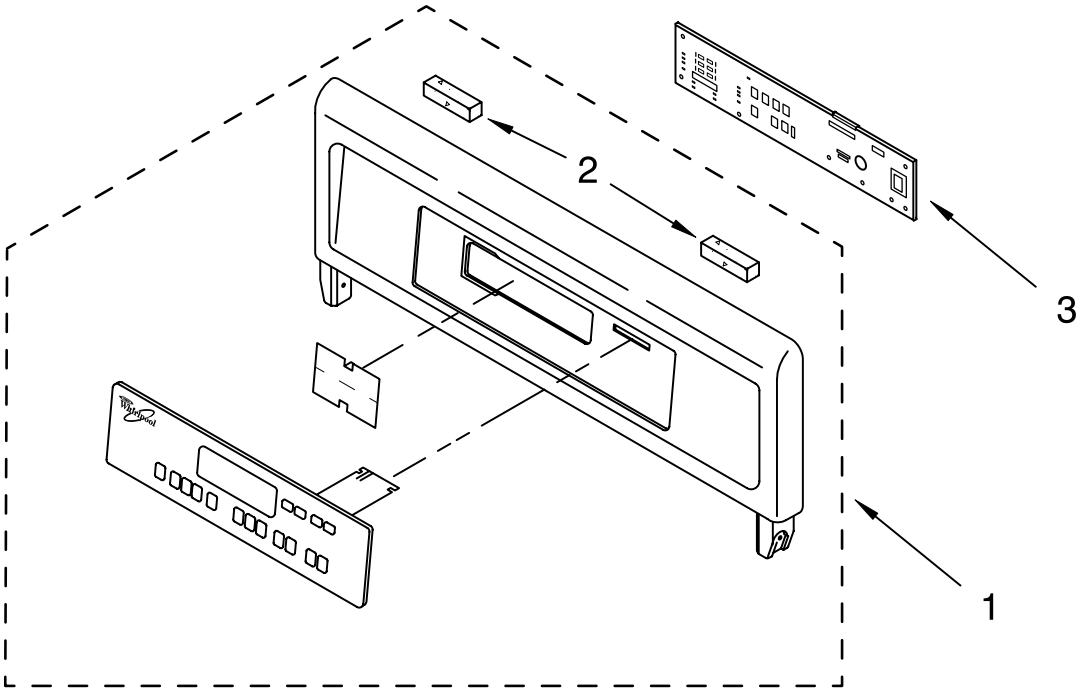

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1		Control Panel Assy. W/Membrane Switch
	8300456	Black Model
	8300455	White Model
	8300529	Biscuit Model
	8281179	Screw
2	4451032	Gasket, Control Panel
3	4452892	Microcomputer
	4449745	Screw
	3400832	Screw

OVEN DOOR PARTS

For Models:RBS245PDB11, RBS245PDQ11, RBS245PDT11

(Black) (Designer White) (Biscuit)

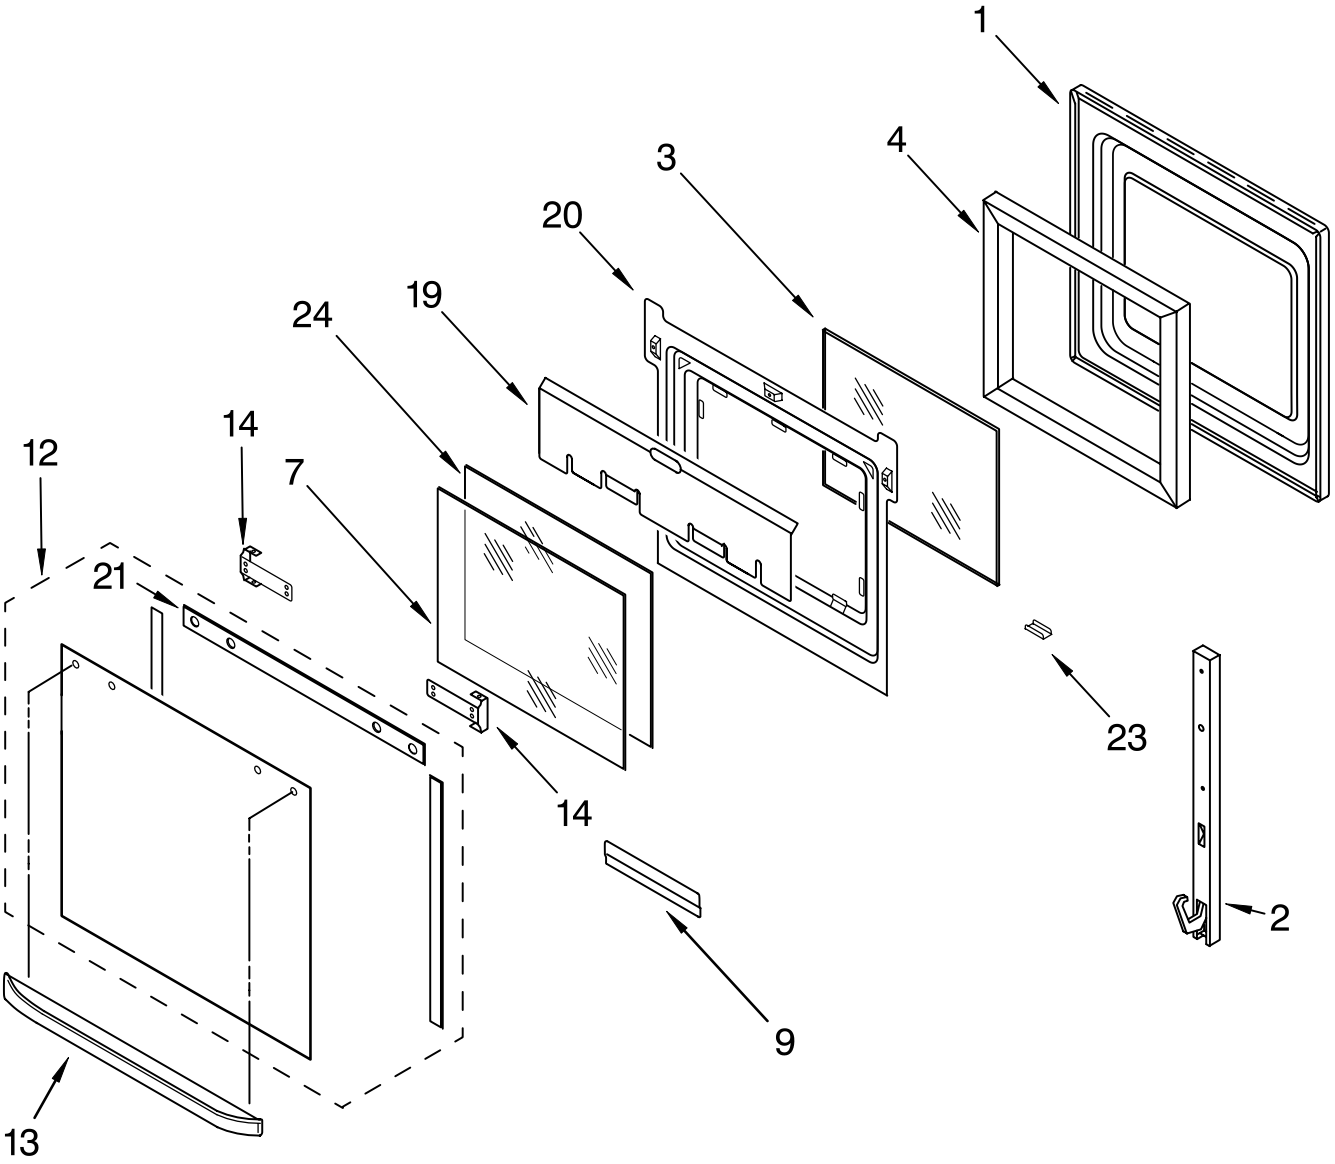

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	4455616	Door Liner
2	4455523	Hinge, Door
	4449743	Screw
3	4449247	Glass, Inner
4	4451720	Insulation,Door
7	4449251	Glass, Inner
9	4451668	Retainer, Glass
	4449809	Screw
12		Door Glass,Assy.
	4452059	Black Model
	4452060	White Model
	8300527	Biscuit Model
13		Door Handle
	4448402	Black Model
	4448403	White Model
	8300512	Biscuit Model
14	4450813	Bracket, Handle
	4451040	Screw
	4449743	Screw
19	4450360	Shield, Heat
	4449809	Screw
20	4451669	Retainer, Glass
	4449809	Screw
21	4451672	Seal, Door Top
23		Retainer, Clip
	4450863	Black Model
	4450864	White Model
	3400832	Screw
24	4455255	Glass, Inner

INTERNAL OVEN PARTS

For Models:RBS245PDB11, RBS245PDQ11, RBS245PDT11
(Black) (Designer White) (Biscuit)

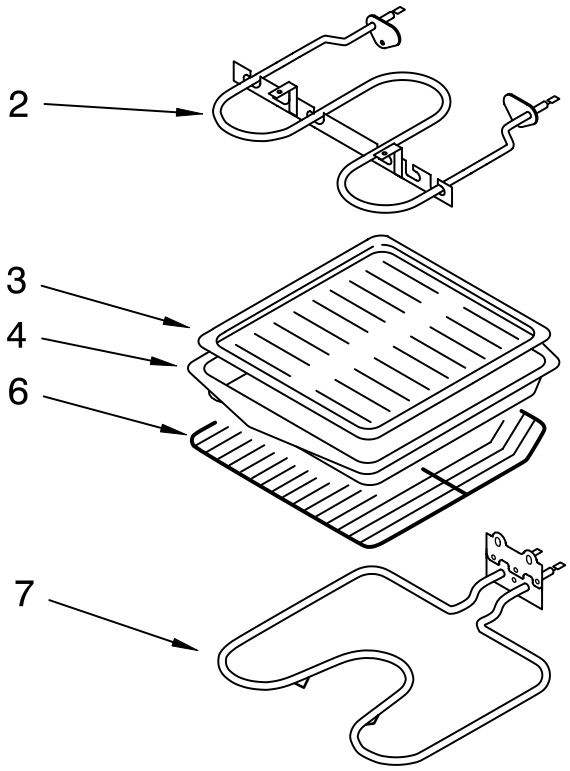

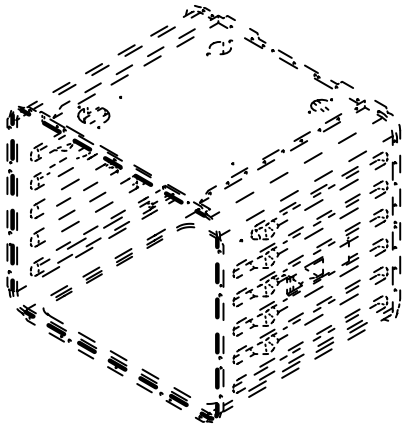

Illus. No.	Part No.	DESCRIPTION
2	4452154	Element, Broil
	4449154	Screw
3	3147563	Grill, Broiler
4	3147845	Pan, Broiler
6	4448716	Rack, Oven
7	4452153	Element, Bake
	4449154	Screw

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP VENTING PARTS

For Models:RBS245PDB11, RBS245PDQ11, RBS245PDT11
(Black) (Designer White) (Biscuit)

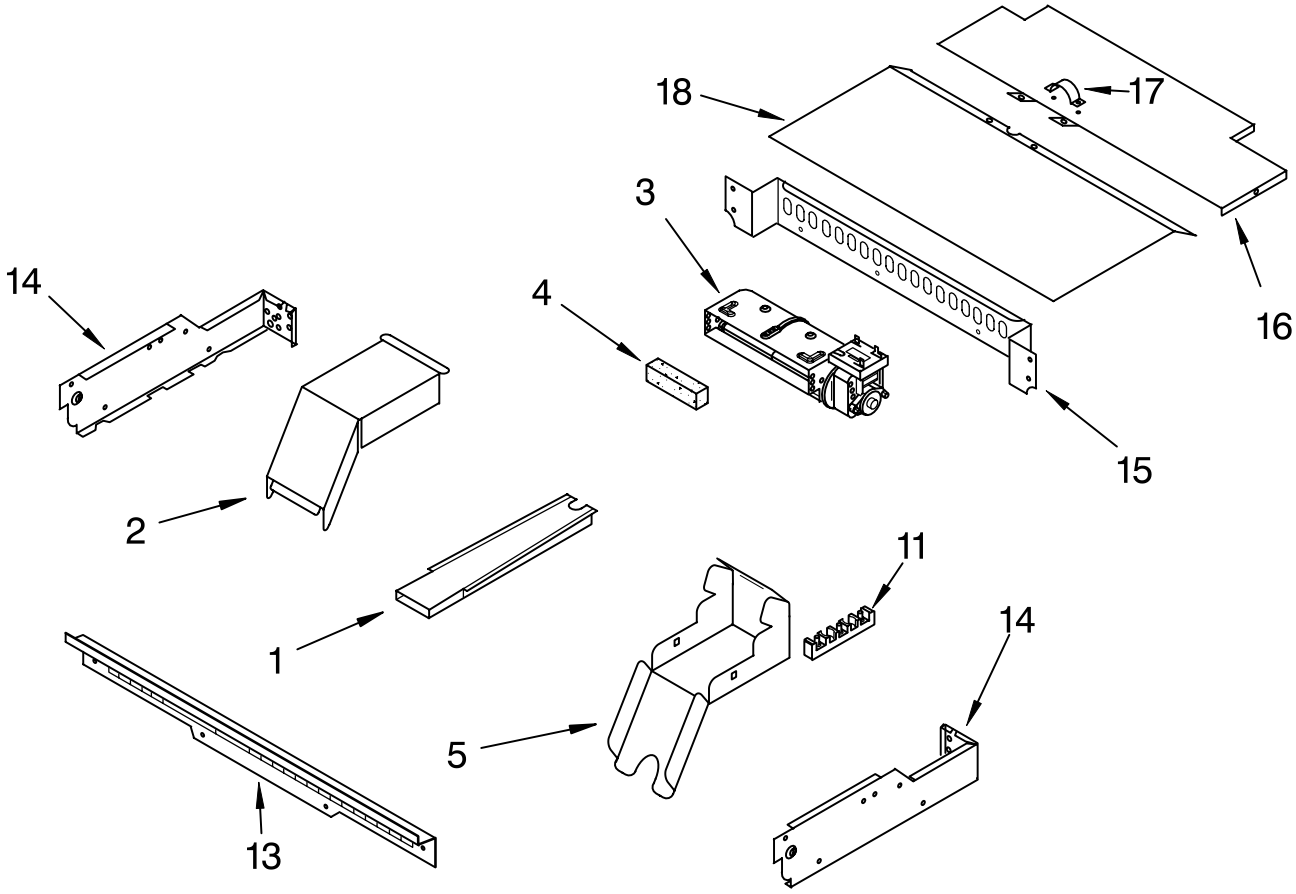

Illus. No.	Part No.	DESCRIPTION
		NOTE: The screws and nuts required to attach a part are listed immediately following that part.
1	4451759	Vent,Exhaust
	4449040	Screw
2	4455178	Elbow, Vent−Top
3	4455334	Blower, 60MM
	4455352	Bracket, Blower
4	4451758	Foam, Block
5	4455177	Elbow, Vent−Bottom
11	4449868	Block, Terminal
	3400080	Screw
13	4448547	Vent, (Control Panel)
	4450038	Screw
14		Side, Control Top
	4451597	Right
	4451598	Left
	4449809	Screw
15	4452244	Back, Control
	4449809	Screw
16	4450549	Cover, Top Rear
	4449809	Screw
17	4448664	Clamp
	4449809	Screw
18	4450552	Cover, Top Front
	4449809	Screw

OPTIONAL PARTS

For Models:RBS245PDB11, RBS245PDQ11, RBS245PDT11

(Black) (Designer White) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
		PAINT, TOUCH−UP (1/2oz.)
	72017	White
	261869	Cord Brown
	72032	Black
		PAINT, SPRAY
	350930	White
	261900	Citrine White
	830864	Black
		ADHESIVE
	591014	Adhesive Loctite (1/3 oz.)
	482338	Sealer, Silastic (3 oz.)

Illus. No.	Part No.	DESCRIPTION
		SPLICING WIRES−−25FT. LENGTH
	242828	Wire (12 Ga. 150 c Black)
	242820	Wire (14 Ga. 150 c Black)
	242821	Wire (14 Ga. 150 c Blue)
	242822	Wire (14 Ga. 150 c Brown)
	242830	Wire (14 Ga. 200 c Brown)
	242823	Wire (14 Ga. 150 c Green)
	242824	Wire (14 Ga. 150 c Orange)
	242829	Wire (12 Ga. 150 c Red)
	242825	Wire (14 Ga. 150 c Red)
	242831	Wire (14 Ga. 200 c Red)
	242826	Wire (14 Ga. 150 c White)
	242827	Wire (14 Ga. 150 c Yellow)
	242832	Wire (14 Ga. 200 c Yellow)

Illus. No.	Part No.	DESCRIPTION
		WIRING HARNESS PARTS
	4449809	Screw
	4455733	Harness, Wire (Main)
	4451761	Support, Wiring
	4454842	Tie, Cable
	4450952	Conduit
	4450800	Screw, Ground
	4448664	Clamp
	4449809	Screw
	112432	Nut
	4452222	Spacer−Harness
	4454835	Tie, Cable
		Miscellaneous
	814381	Pin Hinge Kit
	4448950	Screw, Install (2)